



invisibly present

STREETPLUG OPERATING MANUAL

REMOTE CONTROL (HOMELINK)

WARNING! Homelink is a remote control that only allows a StreetPlug to be operated in a private environment, this is not possible for public applications. It is already configured by request to a specific StreetPlug and cannot be used on any other StreetPlug.

TO START CHARGING SESSION



STEP 1 Connect charging cable to means of transport

STEP 2 Point the homelink towards the StreetPlug and press the button in the centre For the proper operation of the homelink, we recommend a distance of max. 10 meters.

STEP 3 Lid of the StreetPlug opens
Green light flashes

STEP 4 Connect charging cable to the StreetPlug

STEP 5 Manually close the StreetPlug lid, charging transaction starts

Light turns blue



Note: If the StreetPlug's lid is open for more than 30 seconds without a connected charging cable, the StreetPlug will go into reset mode for 2.5 min. Close the lid, green light no longer flashes. Now when using the homelink there is a short beep but no action. StreetPlug is ready to operate after 2.5 min.

STOP CHARGING



STEP 1 Point the homelink towards the StreetPlug and press the button in the centre Ending of charging session only possible with the homelink

STEP 2 Lid of the StreetPlug opens

STEP 3 Disconnect cable from StreetPlug and means of transport

STEP 4 Manually close the StreetPlug lid, ready for next charging session

Light turns green

STATUSES OF LIGHT ON LID

The StreetPlug has several statuses, which are as follows:

Green light StreetPlug ready for charging or coupled means of transport fully charged

Green flashing light StreetPlug waiting for charging cable

Blue light StreetPlug charging

Red light StreetPlug is connecting to network

Red flashing light StreetPlug error







UNDERGROUND CHARGING STATION FOR ELECTRIC VEHICLES



invisibly present

www.streetplug.nl